




## BWT Perla регулярное обслуживание



Änderungen vorbehalten  
Changes reserved!

Плановое обслуживание  
Версия программного обеспечения 1.0806

Текущее обслуживание (полугодовое обслуживание) выполняется не реже одного раза в 6 месяцев и может выполняться самим проинструктированным оператором.

Во время регенерации - обслуживание невозможно, об этом свидетельствует сообщение на дисплее умягчителя.

Пожалуйста, соблюдайте инструкции по технике безопасности указанные в инструкции по установке и эксплуатации вашего оборудования.

Запрос на проведение планового обслуживания отображается:

- на дисплее устройства в разделе **«Текущие сообщения»**

и

- в приложении BWT Best Water Home.  
На дисплее устройства сообщение исчезает при нажатии на **«Подтвердить»**, но появляется снова до тех пор, пока не будет выполнено техническое обслуживание. Нажмите X, чтобы закрыть текущие сообщения и перейти на главный экран.




## 2 Необходимые аксессуары


- Тест на жесткость воды
- Таблетка для очистки (IoClean).
- При необходимости регенерирующий агент - таблетированная соль

### 3 Performance


- To start routine maintenance, tap the sandwich menu on the home screen.

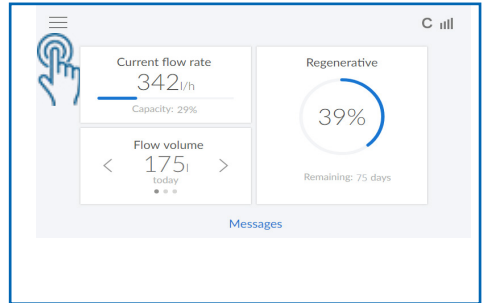


- Select **Functions**

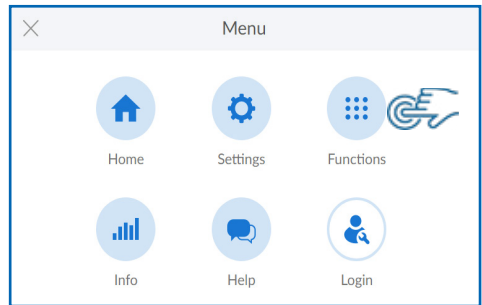


- Select **Maintenance**

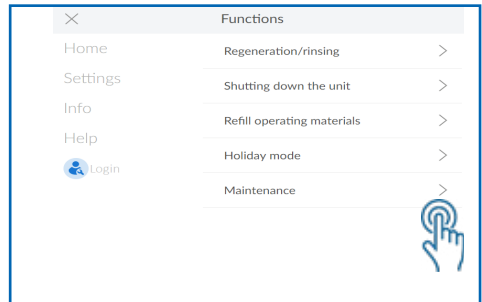


- Select **Operator**

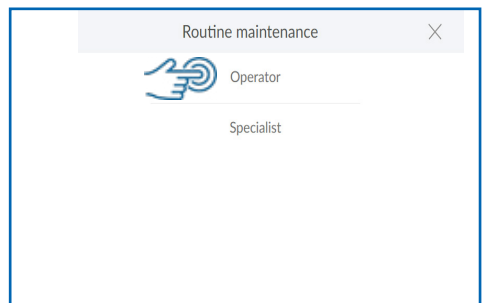


- **START** routine maintenance. You will be guided through the following steps for maintenance: Water hardness test (BWT AQA test or pearl water check)

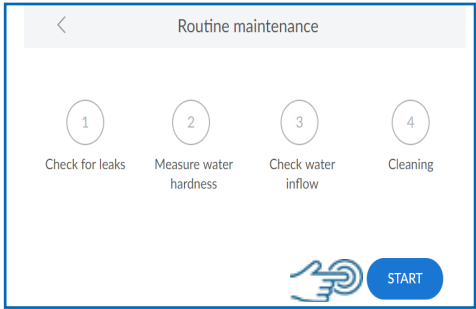


- In this step you will check the systems for leaks. Pay special attention to water leakage at the screw connections (blue arrows in the picture). Confirm with **CHECKED**.

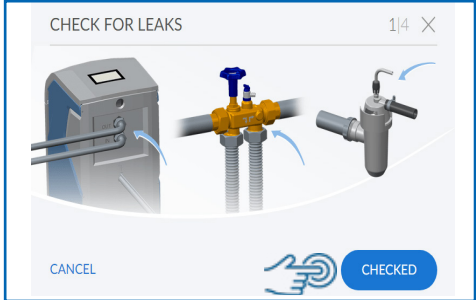

- To determine the water hardness, the water sample should be taken at the nearest tapping point at a volume flow of 400-600 l/h. Confirm with **TESTED**.

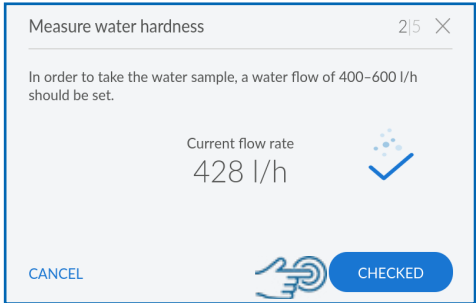


- In this step check the set initial water hardness. Use the enclosed Pearl Water Check and follow the instructions for its use. Confirm with **TESTED**.

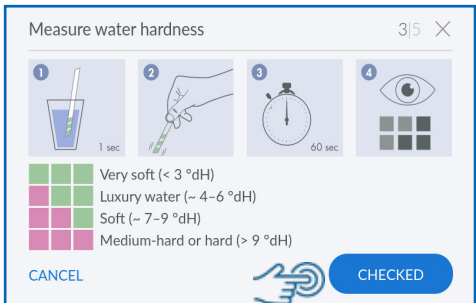


- In this step check that the flow and consumption are correctly detected by the product.
- To do this, let water flow at a tap
- Confirm with **CHECKED**.




- In this step you carry out the semi-annual cleaning of your product. For cleaning please use only BWT loClean cleaning tablets.
- Open the packaging and throw the loClean cleaning tablet into the opening provided on the device (see picture opposite).
- Select **PERFORMED**

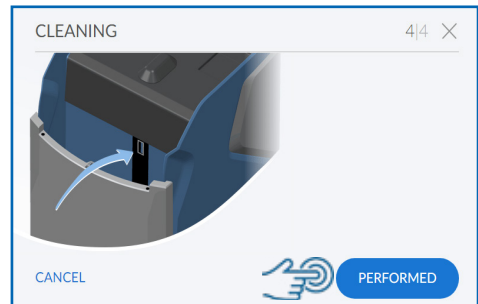

- The remaining time of the cleaning process is shown in the device display.

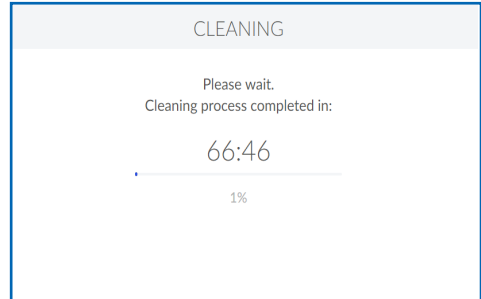

- When the cleaning process is finished, the operating display (home screen) appears.
- Routine maintenance is complete.

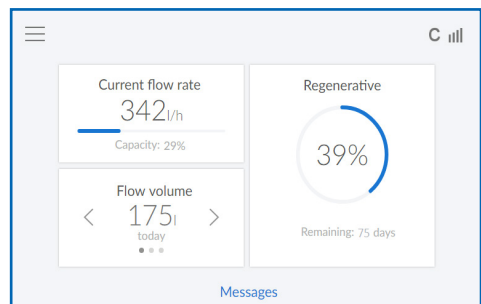

- Open the lid (touch from above)
- Clean regenerant packaging if necessary
- Fill up with regenerant (optimum filling level 100 %)
- Close the lid
- Measurement of the regenerant level takes place automatically after the next regeneration



If desired, you can trigger an immediate measurement of the replenishment level as follows:

- **Sandwich menu**
- **Functions**
- **Fill up operating resources**
- **REFILL**
- **CONFIRM**

The BWT drop flashes while the measurement is still running (approx. 3 min.).

**Further information can be found in our installation and operating instructions at:**

<https://www.bwt.com/de-de/kundenservice/service-haustechnik/perla-wartung/>

**For more information contact us:**

**BWT Austria GmbH**

Walter-Simmer-Straße 4  
A-5310 Mondsee  
Phone: +43 / 6232 / 5011 0  
Fax: +43 / 6232 / 4058  
E-Mail: [office@bwt.at](mailto:office@bwt.at)

**BWT Wassertechnik GmbH**

Industriestraße 7  
D-69198 Schriesheim  
Phone: +49 / 6203 / 73 0  
Fax: +49 / 6203 / 73 102  
E-Mail: [bwt@bwt.de](mailto:bwt@bwt.de)